

RF CONCEPTS LTD

Note: This is for information only.

It is your own responsibility to ensure your equipment is compatible.

PAL Cameras

(NTSC Cameras below)

SONY DCR-HC19E Mini-DV 1CCD S-AV **out**
SONY DCR-HC22E Mini-DV 1CCD S-AV **out**
SONY DCR-HC32E Mini-DV 1CCD DV+AV in/out
SONY DCR-HC39E Mini-DV 1CCD DV+AV **out**
SONY DCR-HC42E Mini-DV 1CCD DV+AV in/out
SONY DCR-HC90E Mini-DV 1CCD DV+AV in/out
SONY DCR-PC1000E Mini-DV 1CCD DV+AV in/out
SONY DCR-PC53E Mini-DV 1CCD DV+S-AV **out**
SONY DCR-PC55E Mini-DV 1CCD DV+AV in/out
SONY DCR-VX2100E Mini-DV 3CCD DV+AV in/out
SONY HDR-FX1E HDV 3CCD DV+AV in/out
SONY DSR-PD170P DVCAM 3CCD DV+AV in/out
SONY HDR-HC1E HDV 3CCD DV+AV in/out
SONY DCR-DVD202E DVD 1CCD S-AV **out**
SONY DCR-DVD203E DVD 1CCD USB 2.0, S-AV in/out
SONY DCR-DVD403E DVD 1CCD USB 2.0, S-AV in/out
SONY DCR-DVD653E DVD 1CCD USB 2.0, S-AV in/out
SONY DCR-DVD7E DVD 1CCD USB 2.0, S-AV in/out
SONY DCR-DVD92E DVD 1CCD S-AV **out**
SONY DCR-TRV270E Digital-8 1CCD DV+AV **out**
SONY DCR-TRV285E Digital-8 1CCD DV+AV **out**
SONY DCR-TRV480E Digital-8 1CCD DV+AV in/out
SONY DCR-IP1E MICROMV 1CCD MV+S-AV in/out

- CANON
- MV700 Mini-DV 1CCD DV+AV out
- MV700i Mini-DV 1CCD DV in/out, AV out*
- MV730i Mini-DV 1CCD Full DV+AV in/out
- MV750i Mini-DV 1CCD Full DV+AV in/out
- MV800 Mini-DV 1CCD DV+AV out only
- MV830 Mini-DV 1CCD DV+AV out only
- MV830i Mini-DV 1CCD Full DV+AV in/out
- MV850i Mini-DV 1CCD Full DV+AV in/out
- MV880X Mini-DV 1CCD DV out, AV in/out
- MVX200 Mini-DV 1CCD DV+AV out only
- MVX200i Mini-DV 1CCD Full DV+AV in/out
- MVX250i Mini-DV 1CCD Full DV+AV in/out
- MVX300 Mini-DV 1CCD DV+AV out only
- MVX330i Mini-DV 1CCD Full DV+AV in/out
- MVX350i Mini-DV 1CCD Full DV+AV in/out
- MVX20i Mini-DV 1CCD Full DV+AV in/out
- MVX25i Mini-DV 1CCD Full DV+AV in/out
- MVX30i Mini-DV 1CCD Full DV+AV in/out
- MVX35i Mini-DV 1CCD Full DV+AV in/out
- MVX40 Mini-DV 1CCD DV+AV out only

- MVX40i Mini-DV 1CCD Full DV+AV in/out
- MVX45i Mini-DV 1CCD Full DV+AV in/out
- MVX3i Mini-DV 1CCD Full DV+AV in/out
- DM-XM2 Mini-DV 3CCD Full DV+AV in/out
- DM-XL2 Mini-DV 3CCD Full DV+AV in/out

- JVC

- GZ-MC100 MicroDrive 1CCD USB 2.0, AV out
- GZ-MC200 MicroDrive 1CCD USB 2.0, AV out
- GZ-MC500 MicroDrive 3CCD USB 2.0, AV out
- GZ-MG20 HDD 1CCD USB 2.0, AV out
- GZ-MG30 HDD 1CCD USB 2.0, AV out
- GZ-MG50 HDD 1CCD USB 2.0, AV out
- GZ-MG70 HDD 1CCD USB 2.0, AV out
- GR-D23 Mini-DV 1CCD DV+AV out only
- GR-D53 Mini-DV 1CCD DV in/out, AV out
- GR-D73 Mini-DV 1CCD Full DV+AV in/out
- GR-D93 Mini-DV 1CCD Full DV+AV in/out
- GR-D230 Mini-DV 1CCD DV+AV in/out
- GR-DX28 Mini-DV 1CCD DV+AV out only
- GR-DX57 Mini-DV 1CCD Full DV+AV in/out
- GR-DX97 Mini-DV 1CCD DV+AV out only
- GR-D240 Mini-DV 1CCD DV+AV out only
- GR-D290 Mini-DV 1CCD DV in/out, AV out
- GR-DF420 Mini-DV 1CCD DV+AV out only
- GR-DF470 Mini-DV 1CCD Full DV+AV in/out
- GR-DZ7 Mini-DV 1CCD Full DV+AV in/out
- GR-PD1 Mini-DV 1CCD Full DV+AV in/out
- GR-X5 Mini-DV 3CCD Full DV+AV in/out

- PANASONIC

- VD-RM55B DVD 1CCD USB 2.0, AV in/out
- VD-RM75B DVD 1CCD USB 2.0, AV in/out
- NV-GS17B Mini-DV 1CCD DV+AV out only
- NV-GS21B Mini-DV 1CCD DV+AV out only
- NV-GS35B Mini-DV 1CCD DV+AV out only
- NV-GS75B Mini-DV 3CCD DV+AV out only
- NV-GS150B Mini-DV 3CCD DV+AV out only
- NV-GS200B Mini-DV 3CCD Full DV+AV in/out
- NV-GS250B Mini-DV 3CCD Full DV+AV in/out
- NV-GS400B Mini-DV 3CCD Full DV+AV in/out
- SDR-S100 SD Video 3CCD USB 2.0, AV out

- SAMSUNG

- VP-D6550 Mini-DV 1CCD DV+AV out only
- VP-D351 Mini-DV 1CCD DV+AV out only
- VP-D353 Mini-DV 1CCD DV+AV out only
- VP-D323 Mini-DV 1CCD USB 2.0, AV out
- VP-D325i Mini-DV 1CCD DV in/out, AV out
- VP-M105 SolidState 1CCD USB 2.0
- VP-M110 SolidState 1CCD USB 2.0, AV in/out
- VP-X110 SolidState 1CCD USB 2.0, AV in/out
- VP-D230 Mini-DV 1CCD DV+AV out only
- VP-D270i Mini-DV 1CCD DV in/out, AV out

- HITACHI
- DZ-MV550E DVD 1CCD USB 2.0, AV out
- DZ-MV580E DVD 1CCD USB 2.0, AV out
- DZ-MV730E DVD 1CCD USB 2.0, AV out
- DZ-MV750E DVD 1CCD USB 2.0, AV out
- DZ-MV780E DVD 1CCD USB 2.0, AV out
- DZ-GX20E DVD 1CCD USB 2.0, AV out

- SANYO
- Xacti VPC-C1E SolidState 1CCD USB 2.0, AV out
- Xacti VPC-C4E SolidState 1CCD USB 2.0, S-AV out
- Xacti VPC-C5E SolidState 1CCD USB 2.0, AV out

Note: This is for information only.

It is your own responsibility to ensure your equipment is compatible.

NTSC Cameras

Manufacturer	Model	AV Input	LANC
Canon	Elura	Yes - docking unit	Yes
Canon	Elura 2	Yes - docking unit	Yes
Canon	Elura 2 MC	Yes - docking unit	Yes
Canon	Elura 10	Yes - docking unit	Yes
Canon	Elura 20 MC	Yes - docking unit	Yes
Canon	Elura 40 MC	Yes	Yes
Canon	Elura 50 MC *	Yes	Yes
Canon	Elura 60	Yes	No
Canon	Elura 65	Yes	No
Canon	Elura 70	Yes	No
Canon	Elura 80	Yes	No
Canon	Elura 85	Yes	No
Canon	Elura 90	Yes	No
Canon	ES75	No	
Canon	ES8400	No	
Canon	ES8600	No	
Canon	GL1	Yes	Yes
Canon	GL2	Yes	Yes
Canon	Optura	No	Yes
Canon	Optura 10 MC	Yes	No
Canon	Optura 20 MC	Yes	No
Canon	Optura 30	Yes	No
Canon	Optura 40	Yes	No
Canon	Optura 50	Yes	No
Canon	Optura 60	Yes	No
Canon	Optura 100 MC	Yes	Yes
Canon	Optura 200 MC	Yes	Yes
Canon	Optura 300	Yes	No
Canon	Optura 400	Yes	No
Canon	Optura 500	Yes	No
Canon	Optura PI	Yes	Yes
Canon	Optura Xi	Yes	No
Canon	Ultura	No	Yes
Canon	Vistura	No	Yes
Canon	XL1	Yes	No
Canon	XL2	Yes	Yes

Canon	XL1S	Yes	Yes
Canon	ZR	No	Yes
Canon	ZR10	Yes	Yes
Canon	ZR20 *	Yes	Yes
Canon	ZR25 MC *	Yes	Yes
Canon	ZR30 MC *	Yes	Yes
Canon	ZR40 **	Yes	Yes
Canon	ZR45 MC **	Yes	Yes
Canon	ZR50 MC **	Yes	Yes
Canon	ZR60	Yes	No
Canon	ZR65 MC	Yes	No
Canon	ZR70 MC	Yes	No
Canon	ZR80	Yes	No
Canon	ZR85	Yes	No
Canon	ZR90	Yes	No
Canon	ZR100	Yes	No
Canon	ZR200	Yes	No
Canon	ZR300	Yes	No
Canon	ZR400	Yes	No
Hitachi	DZMV100A(dvd)	Yes	No
Hitachi	DZMV200A(dvd)	Yes	No
Hitachi	DZMV230A(dvd)	Yes	No
Hitachi	DZMV270A(dvd)	Yes	No
Hitachi	DZMV350A(dvd)	Yes	No
Hitachi	DZMV380A(dvd)	Yes	No
Hitachi	DZMV580A	Yes	No
JVC	GR-300U	No	No
JVC	GR-AX880	No	No
JVC	GR-AXM210	No	No
JVC	GR-AXM710	No	No
JVC	GR-AXM910	No	No
JVC	GR-D30	No	No
JVC	GR-D33	No	No
JVC	GR-D70	Yes	No
JVC	GR-D73	Yes	No
JVC	GR-D90	Yes	No
JVC	GR-D93	Yes	No
JVC	GR-D200	Yes	No
JVC	GR-DMV96	No	No
JVC	GR-DV90	Yes	No
JVC	GR-DV91U	Yes	No
JVC	GR-DV500	Yes	No
JVC	GR-DV800	Yes	No
JVC	GR-DV2000	Yes	No
JVC	GR-DV3000	Yes	No
JVC	GR-DVF10U	No	No
JVC	GR-DVL100	No	No
JVC	GR-DVL120	No	No
JVC	GR-DVL300	No	No
JVC	GR-DVL320	No	No
JVC	GR-DVL500	No	No
JVC	GR-DVL510	No	No
JVC	GR-DVL520	No	No
JVC	GR-DVL720	No	No
JVC	GR-DVL725	No	No

JVC	GR-DVL805	No	No
JVC	GR-DVL915	Yes	No
JVC	GR-DVL920	Yes	No
JVC	GR-DVM55	No	No
JVC	GR-DVM70U	No	No
JVC	GR-DVM75	Yes	No
JVC	GR-DVM76	No	No
JVC	GR-DVM80	No	No
JVC	GR-DVM90	No	No
JVC	GR-DVM96	No	No
JVC	GR-DVP3	No	No
JVC	GR-DVP7	Yes	No
JVC	GR-DVP9	Yes	No
JVC	GR-DX75	Yes	No
JVC	GR-DVX90	Yes	No
JVC	GR-DVX400	No	No
JVC	GR-DVX407	No	No
JVC	GR-DVX507	No	No
JVC	GR-DVX707	No	No
JVC	GR-DVX90	Yes	No
JVC	GR-DX75	Yes	No
JVC	GR-DX95US	Yes	No
JVC	GR-DX300	Yes	No
JVC	GR-HD1	Yes	No
JVC	GR-SXM250	No	No
JVC	GR-SXM40	No	No
JVC	GR-SXM2600U	No	No
JVC	GR-SXM320	No	No
JVC	GR-SXM527	No	No
JVC	GR-SXM750	No	No
Panasonic	AGDZ-50	Yes	No
Panasonic	AG-DV1DC	Yes	No
Panasonic	PV-DC352	Yes	No
Panasonic	PV-DV51	No	No
Panasonic	PV-DV52	No	No
Panasonic	PV-DV53	No	No
Panasonic	PV-DV73	No	No
Panasonic	PV-DV100	No	No
Panasonic	PV-DV101	No	No
Panasonic	PV-DV102	No	No
Panasonic	PV-DV103	No	No
Panasonic	PV-DV202	No	No
Panasonic	PV-DV203	No	No
Panasonic	PV-DV400D	No	No
Panasonic	PV-DV402	No	No
Panasonic	PV-DV910	No	No
Panasonic	PV-DV953	Yes	No
Panasonic	PV-GS15	No	No
Panasonic	PV-GS19	No	No
Panasonic	PV-GS31	No	No
Panasonic	PV-GS35	No	No
Panasonic	PV-GS50	Yes	No
Panasonic	PV-GS55	Yes	No
Panasonic	PV-GS65	No	No
Panasonic	PV-GS70	Yes	No

Panasonic	PV-GS120	Yes	No
Panasonic	PV-GS150	No	No
Panasonic	PV-GS200	Yes	No
Panasonic	PV-GS250	Yes	No
Panasonic	PV-GS400	Yes	No
Panasonic	PVL-353	No	No
Panasonic	PVL-453	No	No
Panasonic	PVL-550	No	No
Panasonic	PVL-552	No	No
Panasonic	PVL-652	No	No
Panasonic	PVL-679	No	No
Panasonic	PVL-701	Yes	No
Panasonic	PVL-851	Yes	No
Panasonic	VDR-M30 (dvd)	Yes	No
Panasonic	VDR-M50 (dvd)	Yes	No
Panasonic	VDR-M53	No	No
Panasonic	VDR-M70PP	Yes	No
Panasonic	VDR-M75	No	No
RCA	CC6363 VHS-C	No	No
RCA	CC6383	No	No
RCA	CC9373	No	No
Samsung	SCD-23	No	No
Samsung	SCD-27	Yes	No
Samsung	SCD-33	No	No
Samsung	SCD-86	No	No
Samsung	SCD-90	No	No
Samsung	SCD-590	No	No
Samsung	SCL-810	No	No
Samsung	SCL-860	No	No
Sharp	VL-A110U	No	No
Sharp	VL-AH150U	No	No
Sharp	VL-AH160U	No	No
Sharp	VL-E600	Yes	No
Sharp	VL-NZ50	No	No
Sharp	VL-NZ55	No	No
Sharp	VL-NZ105	Yes	No
Sharp	VL-WD255U	Yes	No
Sharp	VL-WD450U	Yes	No
Sharp	VL-WD650U	Yes	No
Sharp	VL-Z1U	No	No
Sharp	VL-Z3U	Yes	No
Sharp	VL-Z5U	Yes	No
Sharp	VL-Z7U	Yes	No
Sony	CCD-FX240	No	
Sony	CCD-FX340	No	
Sony	CCD-FX640	No	
Sony	CCD-TR5	Yes	
Sony	CCD-TR57	No	Yes
Sony	CCD-TR66	No	
Sony	CCD-TR67	No	Yes
Sony	CCD-TR86	No	
Sony	CCD-TR87	No	Yes
Sony	CCD-TR96	No	
Sony	CCD-TR97	No	Yes
Sony	CCD-TR316	No	Yes

Sony	CCD-TR416	No	<i>Yes</i>
Sony	CCD-TR516	No	<i>Yes</i>
Sony	CCD-TR916	No	
Sony	CCD-TR917	Yes	<i>Yes</i>
Sony	CCD-TR940	Yes	<i>Yes</i>
Sony	CCD-TRV11	No	<i>Yes</i>
Sony	CCD-TRV15	No	<i>Yes</i>
Sony	CCD-TRV16	No	<i>Yes</i>
Sony	CCD-TRV17	No	<i>Yes</i>
Sony	CCD-TRV25	No	<i>Yes</i>
Sony	CCD-TRV35	No	<i>Yes</i>
Sony	CCD-TRV36	No	<i>Yes</i>
Sony	CCD-TRV37	No	<i>Yes</i>
Sony	CCD-TRV41	Yes	<i>Yes</i>
Sony	CCD-TRV43	No	<i>Yes</i>
Sony	CCD-TRV46	No	<i>Yes</i>
Sony	CCD-TRV57	No	<i>Yes</i>
Sony	CCD-TRV58	No	
Sony	CCD-TRV62	Yes	<i>Yes</i>
Sony	CCD-TRV65	Yes	<i>Yes</i>
Sony	CCD-TRV67	No	<i>Yes</i>
Sony	CCD-TRV68	No	<i>Yes</i>
Sony	CCD-TRV72	Yes	<i>Yes</i>
Sony	CCD-TRV75	Yes	<i>Yes</i>
Sony	CCD-TRV81	Yes	<i>Yes</i>
Sony	CCD-TRV82	Yes	<i>Yes</i>
Sony	CCD-TRV85	Yes	<i>Yes</i>
Sony	CCD-TRV87	Yes	<i>Yes</i>
Sony	CCD-TRV93	Yes	<i>Yes</i>
Sony	CCD-TRV99	Yes	<i>Yes</i>
Sony	CCD-TRV107	No	<i>No</i>
Sony	CCD-TRV108	No	<i>No</i>
Sony	CCD-TRV118	No	<i>Yes</i>
Sony	CCD-TRV128	No	
Sony	CCD-TRV138	No	<i>No</i>
Sony	CCD-TRV140	No	<i>No</i>
Sony	CCD-TRV215	No	<i>Yes</i>
Sony	CCD_TRV228	No	
Sony	CCD-TRV308	No	<i>No</i>
Sony	CCD-TRV315	No	<i>Yes</i>
Sony	CCD-TRV318	No	<i>Yes</i>
Sony	CCD-TRV328	No	
Sony	CCD-TRV338	No	<i>No</i>
Sony	CCD-TRV408	No	<i>No</i>
Sony	CCD-TRV428	No	
Sony	CCD-TRV517	No	
Sony	CCD-TRV608	No	<i>No</i>
Sony	CCD-TRV615	Yes	<i>Yes</i>
Sony	CCD-TRV715	Yes	<i>Yes</i>
Sony	CCD-TRV716	No	<i>Yes</i>
Sony	CCD-TRV815	Yes	<i>Yes</i>
Sony	DCM-M1	Yes	<i>No</i>
Sony	DCR-DVD7	Yes	<i>No</i>
Sony	DCR-DVD92 *	Yes	<i>Yes</i>
Sony	DCR-DVD100 *	Yes	<i>Yes</i>

Sony	DCR-DVD101 *	Yes	Yes
Sony	DCR-DVD103 *	Yes	Yes
Sony	DCR-DVD200 *	Yes	Yes
Sony	DCR-DVD201 *	Yes	Yes
Sony	DCR-DVD203 *	Yes	Yes
Sony	DCR-DVD300 *	Yes	Yes
Sony	DCR-DCD301 *	Yes	Yes
Sony	DCR-DVD403 *	Yes	Yes
Sony	DCR-DVD602 *	Yes	Yes
Sony	DCR-DVD653 *	Yes	Yes
Sony	DCR-DVD703 *	Yes	Yes
Sony	DCR-DVD803 *	Yes	Yes
Sony	DCR-HC20	No	
Sony	DCR-HC21	No	
Sony	DCR-HC30 *	Yes	Yes
Sony	DCR-HC32 *	Yes	Yes
Sony	DCR-HC40 *	Yes	Yes
Sony	DCR-HC42 *	Yes	Yes
Sony	DCR-HC65 *	Yes	Yes
Sony	DCR-HC85 *	Yes	Yes
Sony	DCR-HC90 *	Yes	Yes
Sony	DCR-HC1000	Yes	Yes
Sony	DCR-IP1	Yes	No
Sony	DCR-IP5	Yes	No
Sony	DCR-IP7BT	Yes	No
Sony	DCR-IP45	Yes	Yes
Sony	DCR-IP55	Yes	Yes
Sony	DCR-IP210	Yes	Yes
Sony	DCR-IP220	Yes	Yes
Sony	DCR-PC1	No	Yes
Sony	DCR-PC3	Yes	Yes
Sony	DCR-PC5	Yes	Yes
Sony	DCR-PC7	No	
Sony	DCR-PC9	Yes	Yes
Sony	DCR-PC10	No	No
Sony	DCR-PC100	Yes	Yes
Sony	DCR-PC101	Yes	Yes
Sony	DCR-PC105	Yes	Yes
Sony	DCR-PC109 *	Yes	Yes
Sony	DCR-PC110	Yes	Yes
Sony	DCR-PC115	Yes	Yes
Sony	DCR-PC120BT	Yes	Yes
Sony	DCR-PC330	Yes	Yes
Sony	DCR-PC350	Yes	Yes
Sony	DCR-PC1000	Yes	Yes
Sony	DCR-SC100	No	
Sony	DCR-TR7000	Yes	Yes
Sony	DCR-TRV5	No	Yes
Sony	DCR-TRV6	Yes	Yes
Sony	DCR-TRV7	No	Yes
Sony	DCR-TRV8	Yes	Yes
Sony	DCR-TRV9	Yes	Yes
Sony	DCR-TRV10	Yes	Yes
Sony	DCR-TRV11	Yes	Yes
Sony	DCR-TRV15	Yes	Yes

Sony	DCR-TRV16	Yes	<i>Yes</i>
Sony	DCR-TRV17	Yes	<i>Yes</i>
Sony	DCR-TRV18	Yes	<i>Yes</i>
Sony	DCR-TRV19	No	<i>Yes</i>
Sony	DCR-TRV20	Yes	<i>Yes</i>
Sony	DCR-TRV22 **	Yes	<i>Yes</i>
Sony	DCR-TRV25 *	Yes	<i>Yes</i>
Sony	DCR-TRV27 *	Yes	<i>Yes</i>
Sony	DCR-TRV30 *	Yes	<i>Yes</i>
Sony	DCR-TRV33 *	Yes	<i>Yes</i>
Sony	DCR-TRV38	Yes	<i>Yes</i>
Sony	DCR-TRV39	Yes	<i>Yes</i>
Sony	DCR-TRV40	Yes	<i>Yes</i>
Sony	DCR-TRV50	Yes	<i>Yes</i>
Sony	DCR-TRV70	Yes	<i>Yes</i>
Sony	DCR-TRV60	Yes	
Sony	DCR-TRV80	Yes	<i>Yes</i>
Sony	DCR-TRV85	Yes	<i>Yes</i>
Sony	DCR-TRV103	Yes	<i>Yes</i>
Sony	DCR-TRV110	Yes	<i>Yes</i>
Sony	DCR-TRV115	Yes	<i>Yes</i>
Sony	DCR-TRV120	Yes	<i>Yes</i>
Sony	DCR-TRV130	No	
Sony	DCR-TRV140	No	
Sony	DCR-TRV145	No	
Sony	DCR-TRV203	Yes	
Sony	DCR-TRV210	Yes	
Sony	DCR-TRV230	Yes	<i>Yes</i>
Sony	DCR-TRV240	Yes	<i>Yes</i>
Sony	DCR-TRV250	No	
Sony	DCR-TRV260	No	
Sony	DCR-TRV280	No	<i>No</i>
Sony	DCR-TRV310	Yes	<i>Yes</i>
Sony	DCR-TRV315	Yes	
Sony	DCR-TRV320	Yes	<i>Yes</i>
Sony	DCR-TRV330	Yes	<i>Yes</i>
Sony	DCR-TRV340 *	Yes	<i>Yes</i>
	DCR-TRV350D8		
Sony	*	Yes	<i>Yes</i>
Sony	DCR-TRV355	No	
Sony	DCR-TRV360	Yes	<i>No</i>
Sony	DCR-TRV460	Yes	<i>No</i>
Sony	DCR-TRV510	Yes	<i>Yes</i>
Sony	DCR-TRV530	Yes	<i>Yes</i>
Sony	DCR-TRV720	Yes	<i>Yes</i>
Sony	DCR-TRV730	Yes	<i>Yes</i>
Sony	DCR-TRV740	Yes	<i>Yes</i>
Sony	DCR-TRV820	Yes	<i>Yes</i>
Sony	DCR-TRV828	Yes	<i>Yes</i>
Sony	DCR-TRV830	Yes	<i>Yes</i>
Sony	DCR-TRV840	Yes	<i>Yes</i>
Sony	DCR-TRV900	Yes	<i>Yes</i>
Sony	DCR-TRV940	Yes	<i>Yes</i>
Sony	DCR-TRV950	Yes	<i>Yes</i>
Sony	DCR-VX700	No	<i>Yes</i>

Sony	DCR-VX1000	Yes	<i>Yes</i>
Sony	DCR-VX2000	Yes	<i>Yes</i>
Sony	DSR-PD100A	Yes	<i>Yes</i>
Sony	DSR-PD150	Yes	<i>Yes</i>
Sony	GV-A500	Yes	<i>Yes</i>
Sony	GR-DV900	Yes	<i>Yes</i>
Sony	GV-D200	Yes	<i>Yes</i>
Sony	GV-D1000	Yes	<i>Yes</i>
Sony	VX700	Yes	<i>Yes</i>
Sony	HDR-FX1	Yes	<i>Yes</i>
Sony	VX1000	No	
Sony	VX2000	Yes	<i>Yes</i>
Sony	VX2100	Yes	<i>Yes</i>

**Note: This is for information only.
It is your own responsibility to ensure your equipment is compatible.**